

Avionics Assembly guide

Funk Gábor

2026. April

1 Important notes

This document stores the assembly procedure for the Aladeen apogee rocket.

1. Plug the GND (black) pin as shown in the image.
2. Plug the PWR (red) pin as shown in the image.
3. AFTER THE FIRST 2 PING, plug the third and fourth (yellow pins) as shown in the images.

It is important to not switch up the black and red wires.

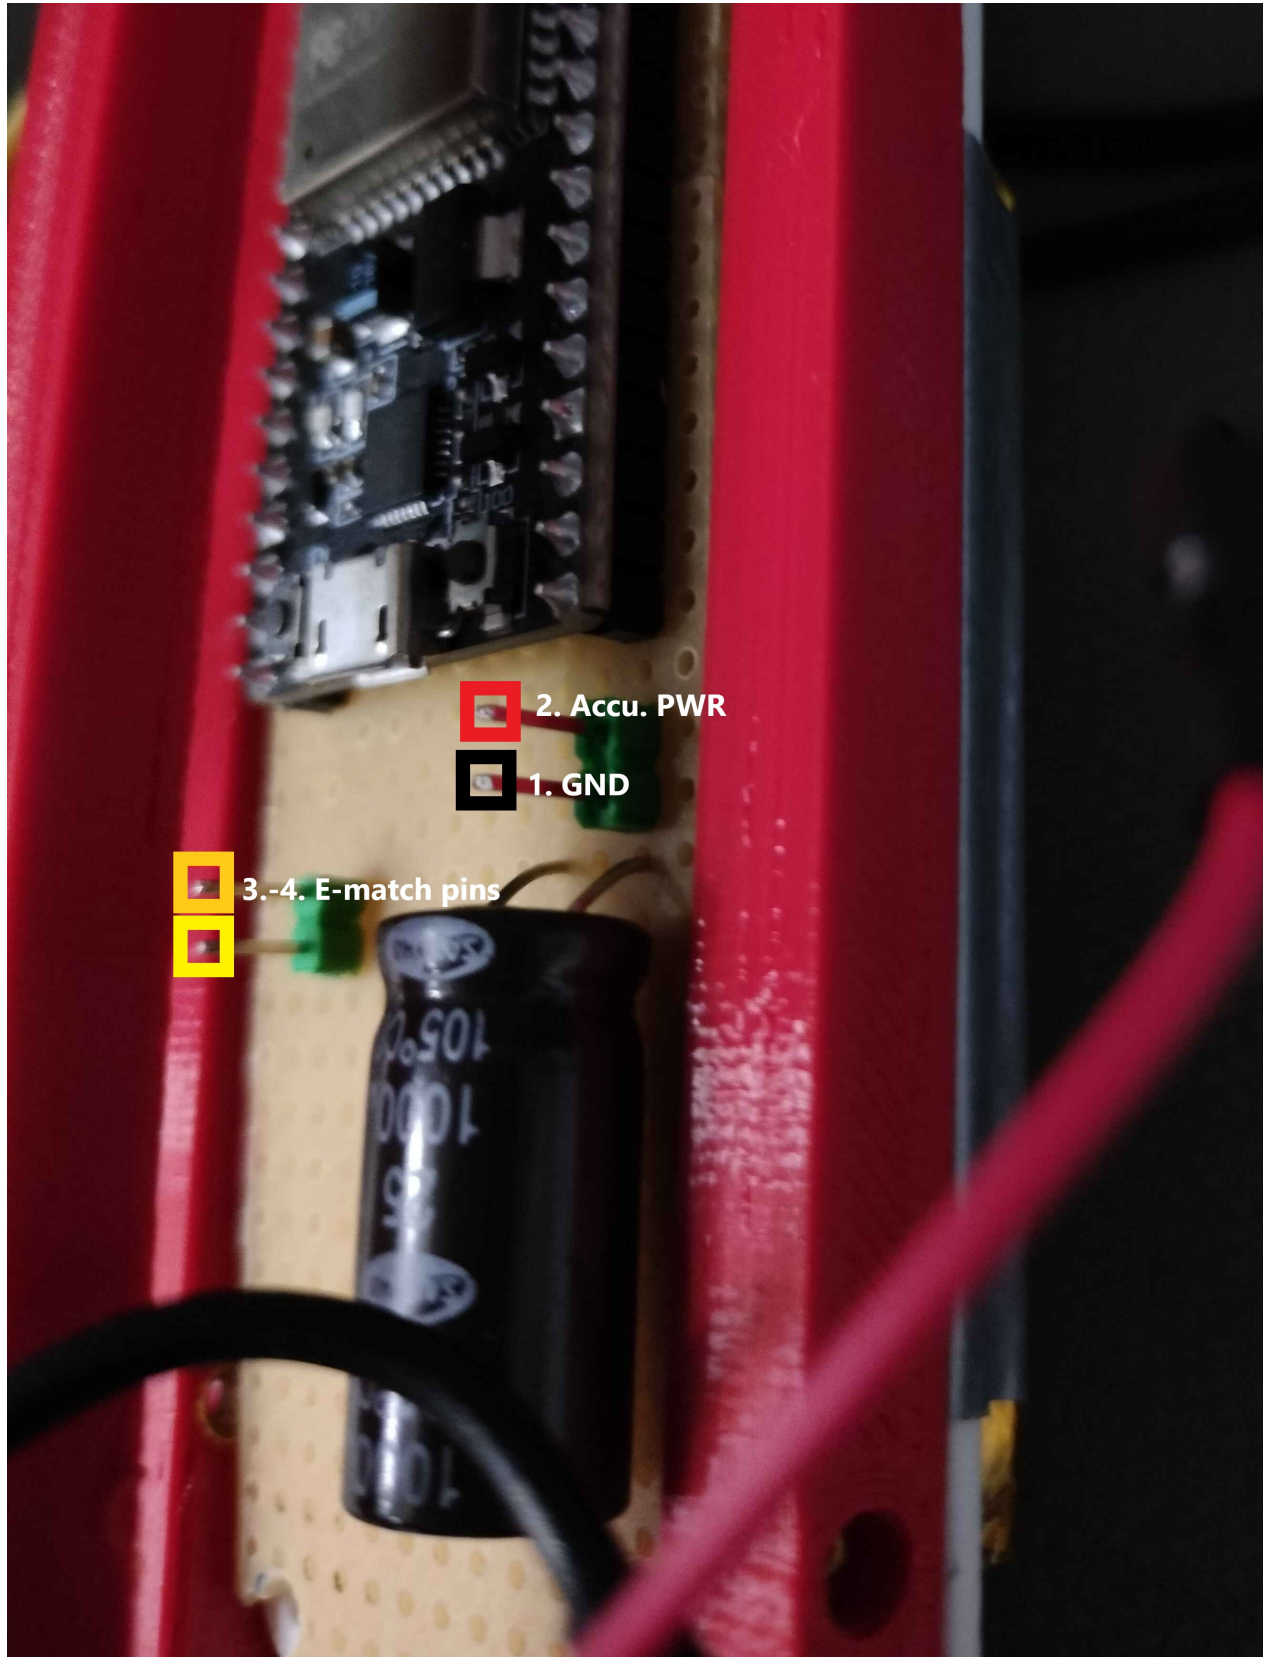


Figure 1: The pinning order for the avionics bay